


## Installing the XF module into the Robin BMFL Wash

***Install the XF module with the device switched off only!  
Unplug from mains before!***

To install the XF module.


1. Disconnect the fixture from mains and allow it to cool for 10 minutes.
2. Remove plastic covers of the head by loosening the 4 quarter-turn fasteners on each cover.
3. Unscrew three screws (1) at sides of the fan holder and remove the fan holder (2) with fan.
4. Unscrew two screws securing the crossbar module (4) on the opposite side of the fixture.
5. Release two cables (power supply for control electronics, communication) from cable holder on the crossbar module (4).
6. Loosen both screws (3) securing the crossbar module (4) to the fixture chassis and remove it from the fixture.

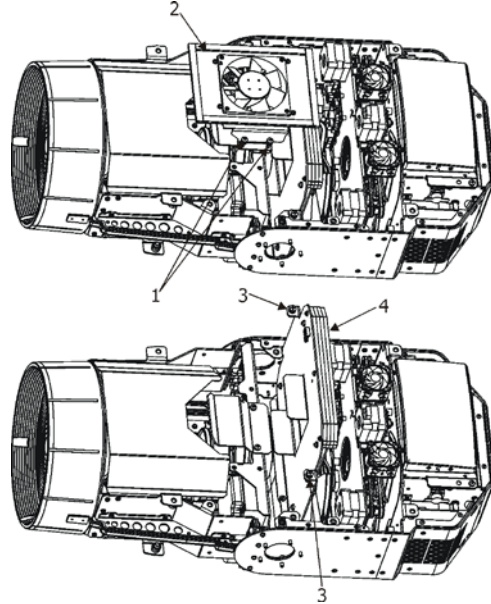


*Cable holder*



7. Insert the XF module (5) into chassis of the fixture and screw two screws (6) at each side of the XF module into chassis of the fixture.
8. Connect two cables (power supply for control electronics, communication) to the XF module (5).
9. Screw the fan holder (2) with fan back to the fixture chassis and secure the XF module (5) on the opposite side via two screws.

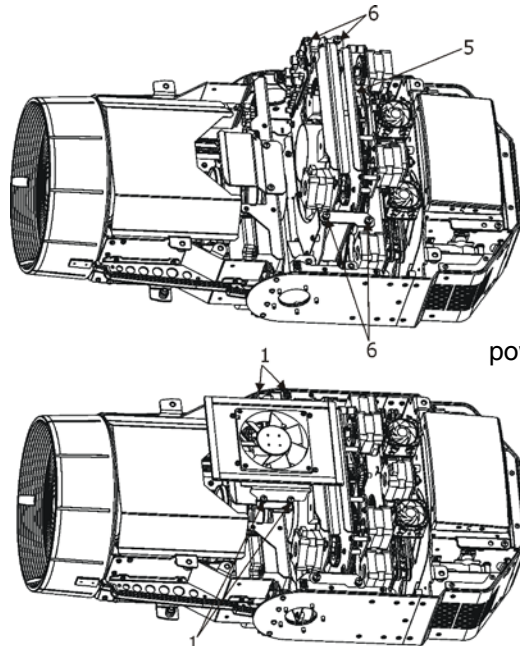

*XF module PCB*

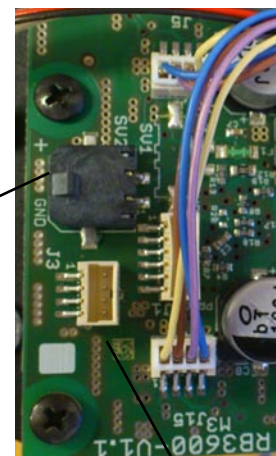

power

communication

10. Place both plastic covers back on the fixture head and tighten the 4 quarter-turn fasteners on each cover.
11. After switching the fixture on, new menu items relating to the new effects will appear in the control menu of the fixture and DMX chart will respond to the Robin BMFL Wash XF. The sign "XF" will appear at the top left corner of the screen.

**Note:** In case that you will remove the XF module (5) from the fixture, the crossbar module (4) has to be installed back to the fixture