

User Manual

Please read this user manual throughout before using

Ver:A

WARRANTY CERTIFICATE

Please register your warranty. Meanwhile, you are welcomed to contact us
via Email: contact@swit.cc

USER INFORMATION

Customer Name:

Phone Number:

Email:

Address:

SALES INFORMATION

Sales Date:

Model:

Product Code:

Dealer:

REPAIR RECORD

Service Date:

Technician:

Issue:

RESULT

Solved

Unsolved

Returned(Replaced)

SWIT Electronics Co., Ltd.

Address: 10 Hengtong Road, Nanjing Economic and Technological Development Zone,
Nanjing 210038, P.R.China

Phone: +86-25-85805753

Fax: +86-25-85805296


Email: contact@swit.cc

<http://www.swit.cc>


Caring For Your SWIT Product

- Please keep the product in a dry, clean, dust-free environment.
- Keep corrosive chemicals, liquids and heat source away from the product to prevent mechanics damage.
- Use only a soft and dry cloth for cleaning the product.
- Malfunction may be caused by dropping, impact of external force.
- Do not attempt to disassemble the product. Doing so voids warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happened.
- Failure to follow all the instructions may result in mechanics damage.
- Warranty does not apply to human errors.


Package List

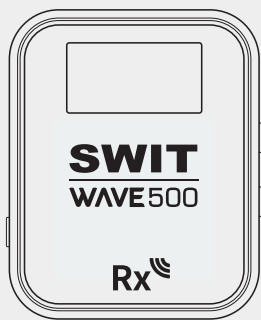

RX Receiver x1

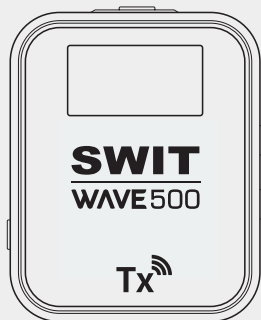

TX Transmitter x2

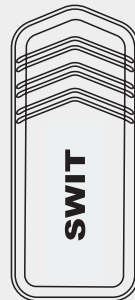


Carrying Bag x1




Mic Windshield x2




Eject Pin x1




3-in-1 Charging Cable x1



External Lav Mic (With Wind Muff) x2

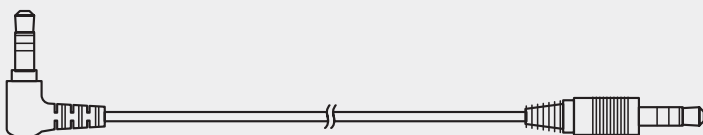


3.5mm TRRS Phone Cable x1

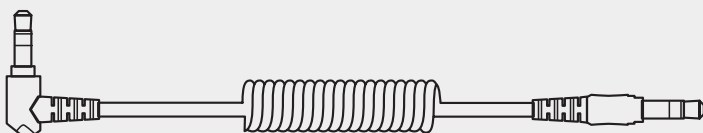


3.5mm TRS Camera Cable x1

Product Instruction

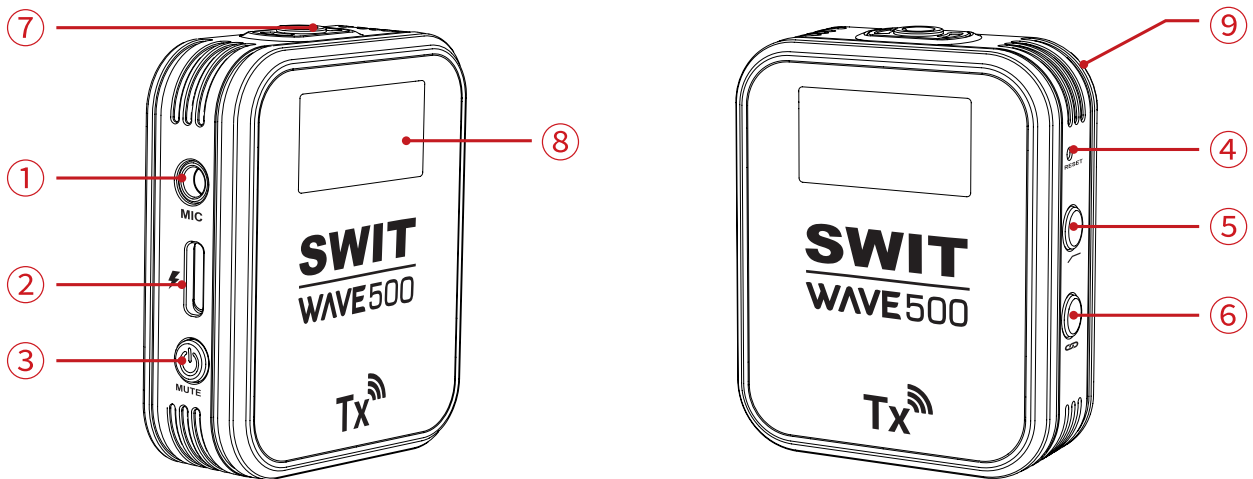

TX Transmitter



- | | |
|------------------------------|------------------|
| ① External Mic Input | ⑥ Pairing |
| ② USB-C Port | ⑦ Built-in Mic |
| ③ Power (MUTE) | ⑧ Display Screen |
| ④ Reset(Help with Eject Pin) | ⑨ Pocket Clip |
| ⑤ Low Cut | |

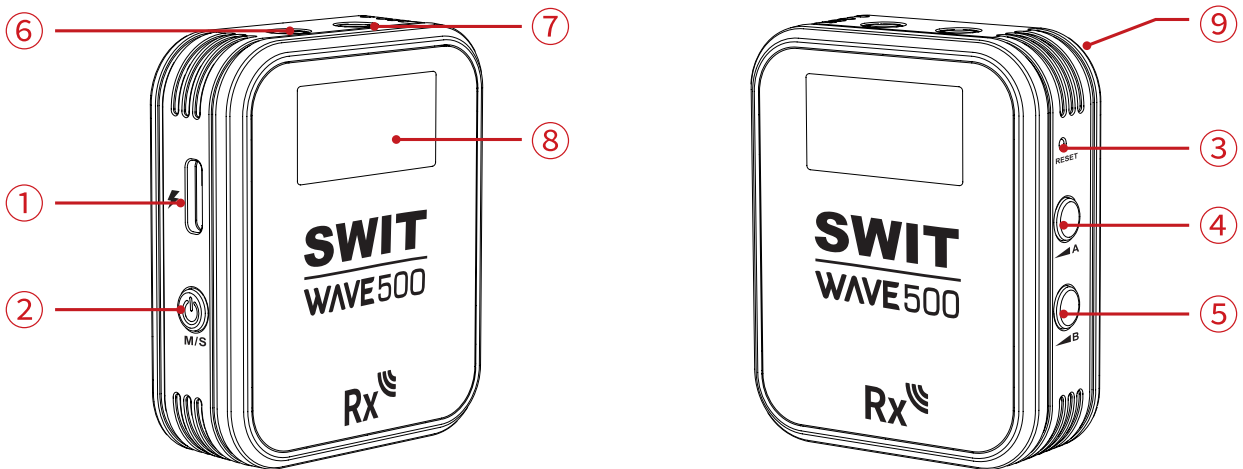

RX Receiver

- | | |
|------------------------------|-------------------------|
| ① USB-C Port | ⑥ 3.5mm Audio Output |
| ② Power(Mono/Stereo) | ⑦ 3.5mm Monitoring Jack |
| ③ Reset(Help with Eject Pin) | ⑧ Display Screen |
| ④ Channel A Gain Control | ⑨ Pocket Clip |
| ⑤ Channel B Gain Control | |

Display Screen

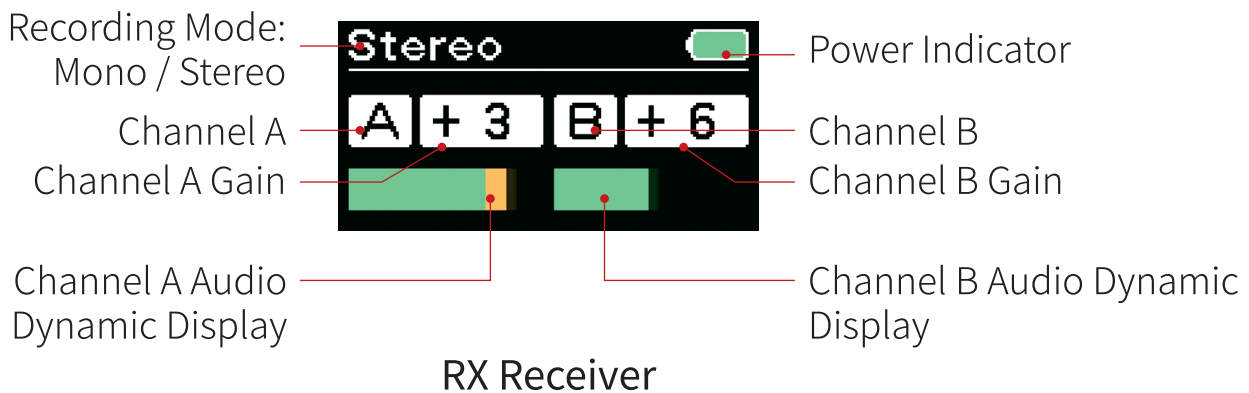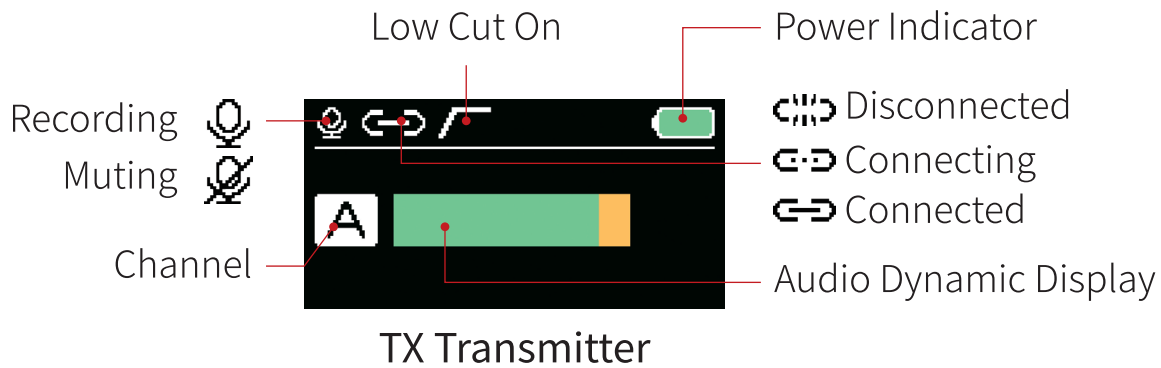

Operations


TX

1. Power/ Mute




Long Press 2s: turn on/off the system
Short Press: mute/unmute the microphone


2. Charging

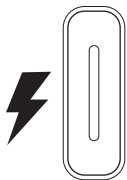

5V/2A; with USB-C Charging Cable
Please fully charge the product before use.



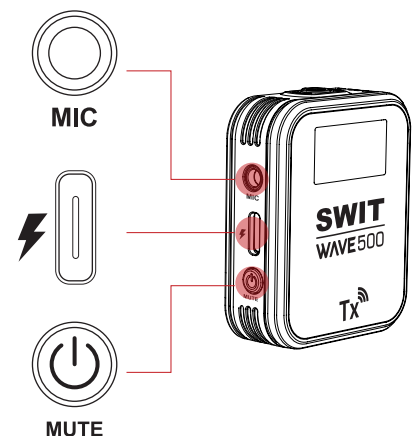


3. External Mic Input

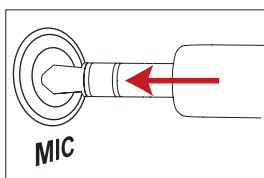


TRS Mic Only
(Note: When using a external mic, please insert it into the mic input properly.)

4. Mic Windshield & Device Installation

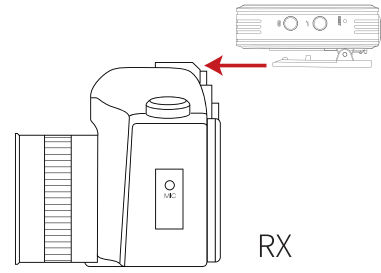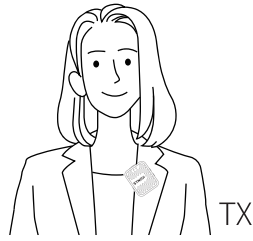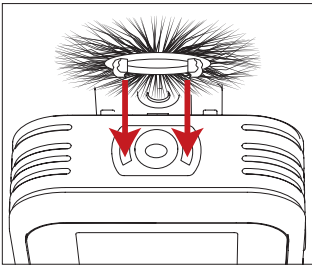

5. Reset




6. Low Cut



Low Cut On



Low Cut Off

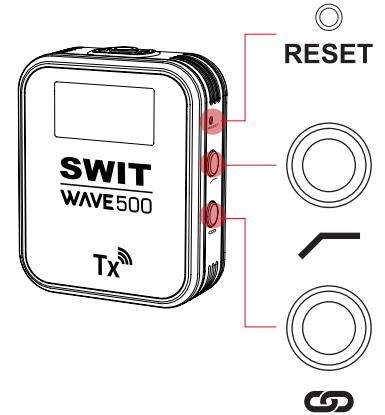

Short Press: 150Hz Low Cut On


Short Press again: Low Cut Off

7. Pairing




TX-Pairing

+

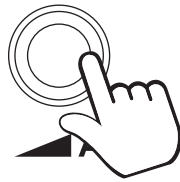

RX-Channel A

+

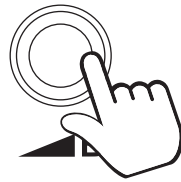


RX-Channel B


Long press for 3s
at the same time



Disconnected

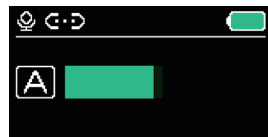

Connecting

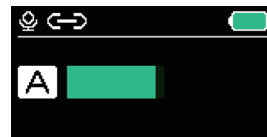

Connected

The system will pair automatically after power on.

(Note: Before successfully connecting, the transmitter channel will display A by default. The TX connected to the receiver first is Channel A, and the one connected later is Channel B.)


Manual pairing: long press the Channel A Gain Control and Channel B Gain Control on the RX and Pairing on the TX for 3 seconds at the same time

RX


1. Power/ Mono/Stereo Switch



Long Press 2s: turn on/off the system
Short Press: Switch Mono/Stereo mode (Note: Stereo mode is unavailable in phone devices.)

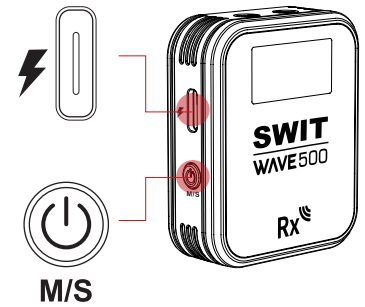


2. Charging

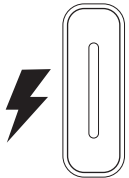

5V/2A; with USB-C Charging Cable
Please fully charge the product before use.

3. Reset

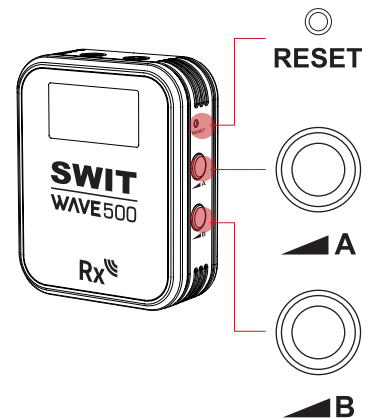

4. Gain Control



Channel A



Channel B

0-5 Level (0 → 3 → 6 → 9 → 12 → 15 → 0)

Each press increases the gain of Channel A / Channel B by one level.

5. Pairing



TX-Pairing

+



RX-Channel A

+



RX-Channel B

Long press for 3s at the same time



Disconnected




Connected

The system will pair automatically after power on.

Manual pairing: long press the Channel A Gain Control and Channel B Gain Control on the RX and Pairing on the TX for 3 seconds at the same time

(Note: The first TX that successfully connects with the RX will be Channel A.)

6. Audio Monitoring & Output Connection

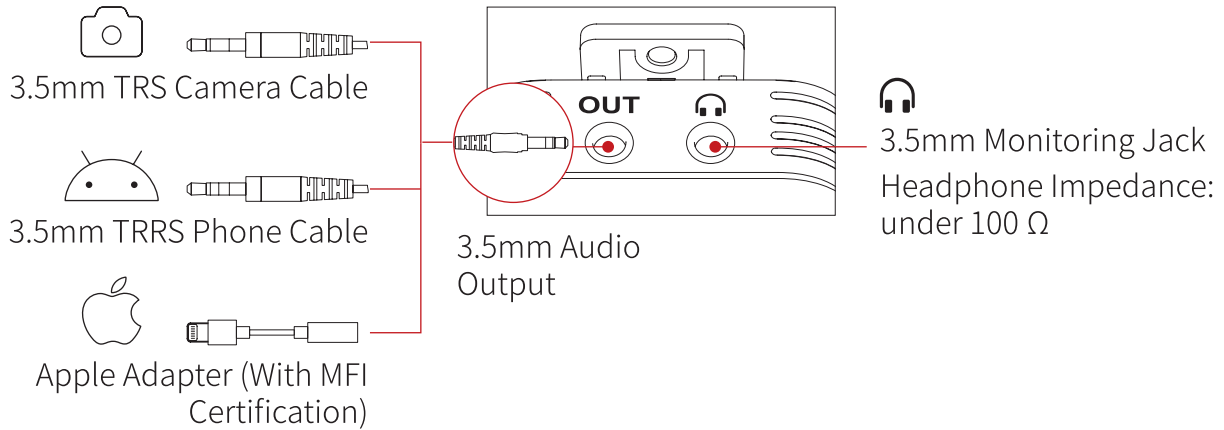


Setting The Recording Level Correctly


Camera devices generally have poor-quality, noisy preamps. In order to get the cleanest signals possible, it is highly recommended that you set the recording level on your camera quite low, 1/2 or 1/3 of it.

G2 provides variable gain control, allowing you to tailor your levels to just about environment and recording device.

Adjust the recording level of inbuilt mics for SONY Camera (Take A7S II for example)

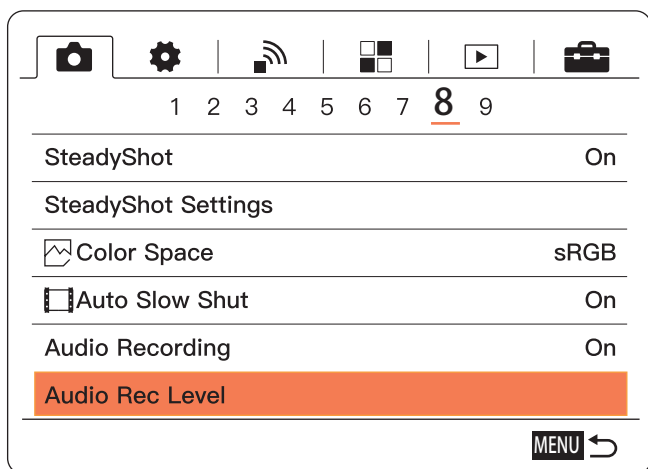


1

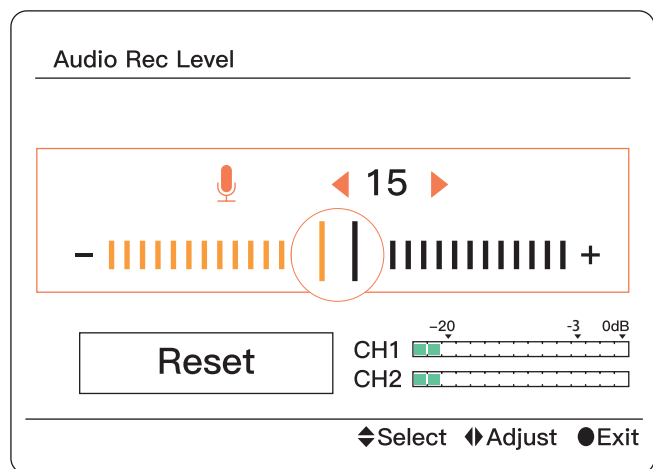


2

Adjust the recording level of inbuilt mics for Canon Camera (Take EOS 5D Mark IV for example)

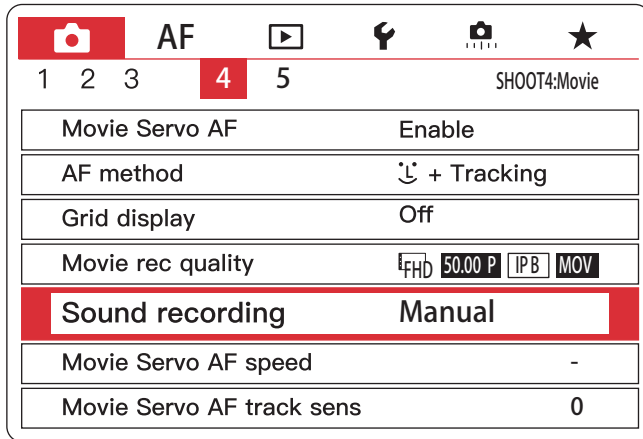


1

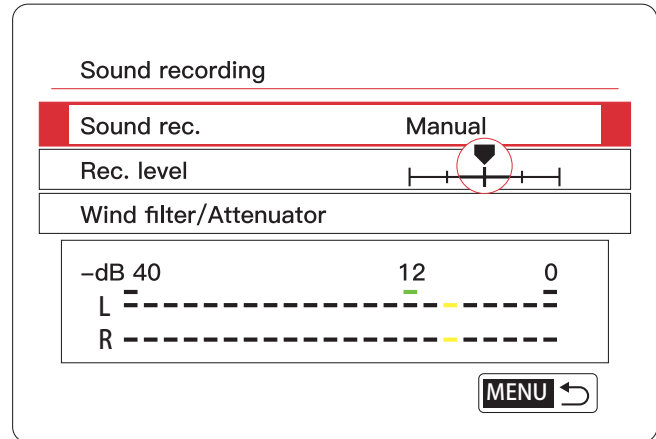


2

Adjust the recording level of inbuilt mics for Panasonic Camera (Take LUMIX GH5 for example)

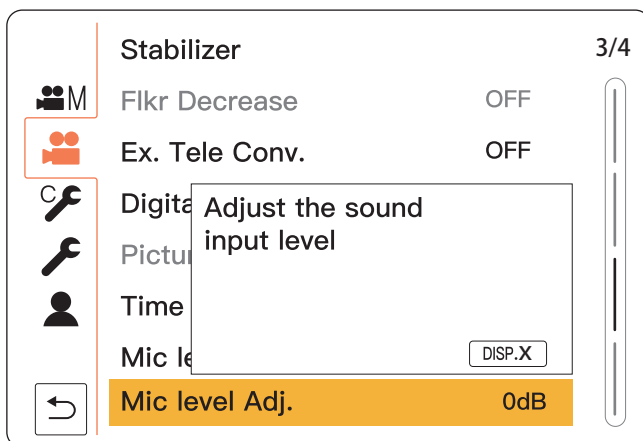

1

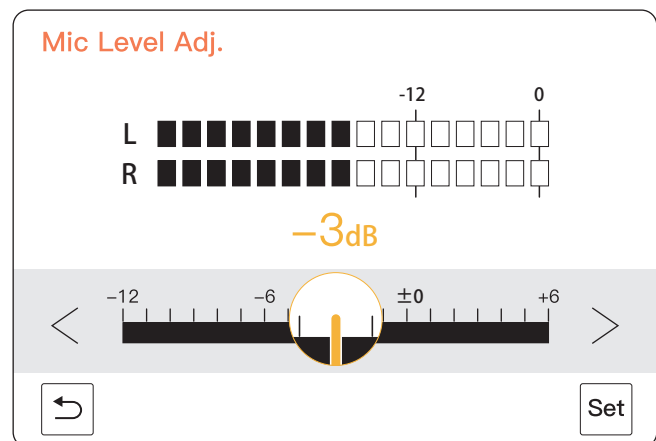

2

Specifications

TX Transmitter

Wireless Transmission	Digital 2.4GHz
RF Frequency Band	2400-2483.5MHz
Frequency Response	20Hz-20KHz
Working Distance	492ft/150m (LOS area), 164ft/50m (NLOS area)
Mounting	Pocket Clip
Audio Input	1/8" / 3.5mm TRS Mic Input

Audio Input Level	1V (0dBV)
Power Requirements	3.3V-4.7V
Battery Type	Built-in Lithium Battery, 400mAh
Battery Charging Time	1.5H
Battery Life	8H
Display	TFT Screen
Dimensions	52×42×17mm
Material	Plastic
Weight	39g

RX Receiver

Wireless Transmission	Digital 2.4GHz
RF Frequency Band	2400-2483.5MHz
Approximate RF Sensitivity	-81dBm
Working Distance	492ft/150m (LOS area), 164ft/50m (NLOS area)
Mounting	Pocket Clip
Number of Audio Channels	2
Audio Output	1/8" / 3.5mm TRS Mic Output 1/8" / 3.5mm TRS Headphone Output
Gain	0-5 Level
Audio Output Level	Line Out: 1V; Monitoring: 25-30mW
Power Requirements	3.3V-4.7V
Battery Type	Built-in Lithium Battery, 400mAh
Battery Charging Time	1.5H
Battery Life	8H
Display	TFT Screen
Dimensions	52×42×17mm

Material	Plastic
Weight	39g

Microphone

Form Factor	Built-in/External Mic
Sound Field	Mono
Polar Pattern	Omnidirectional
Frequency Range	50Hz-20KHz
Sensitivity	-40dB (± 3 dB, re 1V/Pa at 1KHz)
Maximum SPL	135dB SPL (at 1KHz)

Warranty

Warranty Period

Thank you for purchasing SWIT products.

1. Customers are entitled to free replacement or repair service in case of quality defect(s) found in the product under normal use within 30 days upon receipt of the product.
2. Original SWIT products are entitled to **12-month** limited warranty service. The warranty period begins on the date of purchase of brand new, unused products by the first end-user.

Within the warranty period, if product defect or failure is attributable to material deflection or technological problem, the defective product or defective part will be repaired or replaced without charge (service and materials fee).

Warranty Exclusions and Limitations

- Faults resulted from inappropriate use of a product without following its operation specification
- Artificial damage, e.g. crash, squeeze, scratch, or soaking
- Modifications to a product by its user or a third party without prior written consent of SWIT, e.g. replacement of element or circuit, label alteration
- The code on product is inconsistent with that of warranty certificate, or the code on the product or warranty certificate is altered or torn off

- All consumable accessory attached to a product, like cable, wind muff, battery
- Faults as a result of force majeure, such as fire, flood, lightning, etc.

Warranty Claim Procedure

- If failure or any problem occurs to your product after purchase, please contact a local agent for assistance, or you can always contact SWIT customer service through email at **contact@swit.cc**
- Please retain your sales receipt and warranty certificate as proof of purchase. If any of these documents is missing, only sales return or chargeable service will be provided.
- If the SWIT product is out of the warranty coverage, the service and the parts cost will be charged.

SWIT Electronics Co., Ltd.

Address: 10 Hengtong Road, Nanjing Economic and Technological Development Zone,
Nanjing 210038, P.R.China

Phone: +86-25-85805753

Fax: +86-25-85805296

Email: contact@swit.cc

<http://www.swit.cc>